


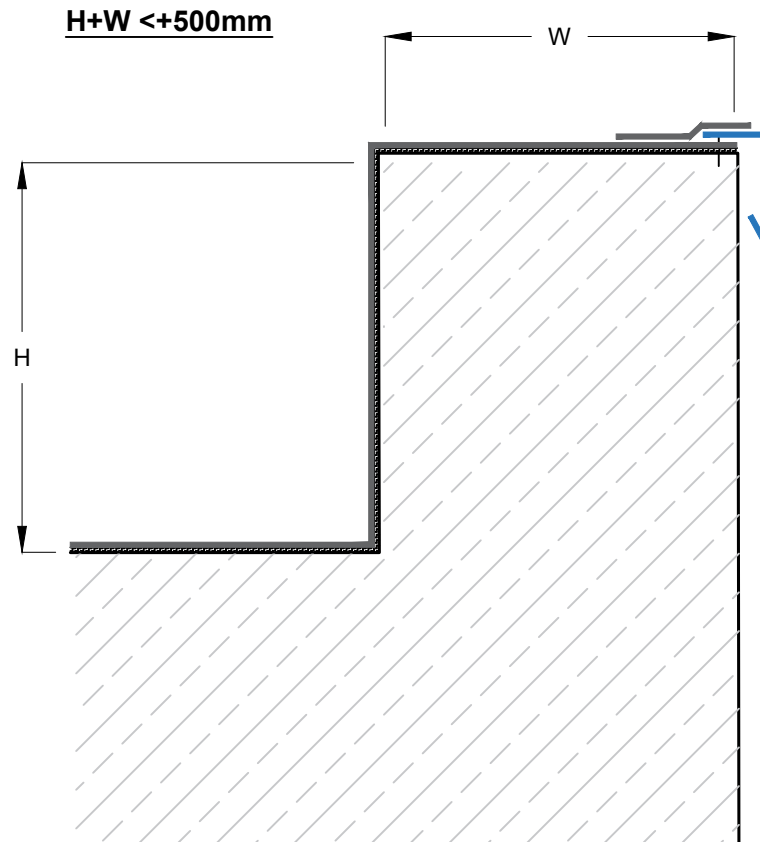

Where H+W is less than or equal to 500mm,
the membrane must be bonded using either:

- HA ADHESIVE - Contact adhered.
- For fleece backed membranes.
- ELASTIC ADHESIVE - Fully adhered.
(QUILOSA PROFESSIONAL MS-35 TOTAL)
- For unbacked and fleece backed membranes.
- For parapets over 800mm high, peel stops must
be employed @ 800mm followed by every 300mm.

KEY:

	UNBACKED EVALON
	EVALON V/VSK
	GENERIC SUBSTRATE

Notes:



Description:
Fully Bonded Parapet Walls
H+W <+500mm

This is a standard generic detail and should be used for
reference purposes only, and not form part of a specification
document.

PRODUCT:
ALWITRA
EVALON V/VSK

Drawing Date:
JULY 2026

Scale:
NTS

Drawing No: EVA STD -3.10A	Rev. 4	Sheet 1 / 1
--------------------------------------	------------------	-----------------------